


PERFORATOR MODEL

Distributed by



America West Drilling Supply
(800) 800-8444 / (775) 355-1199
awds.com

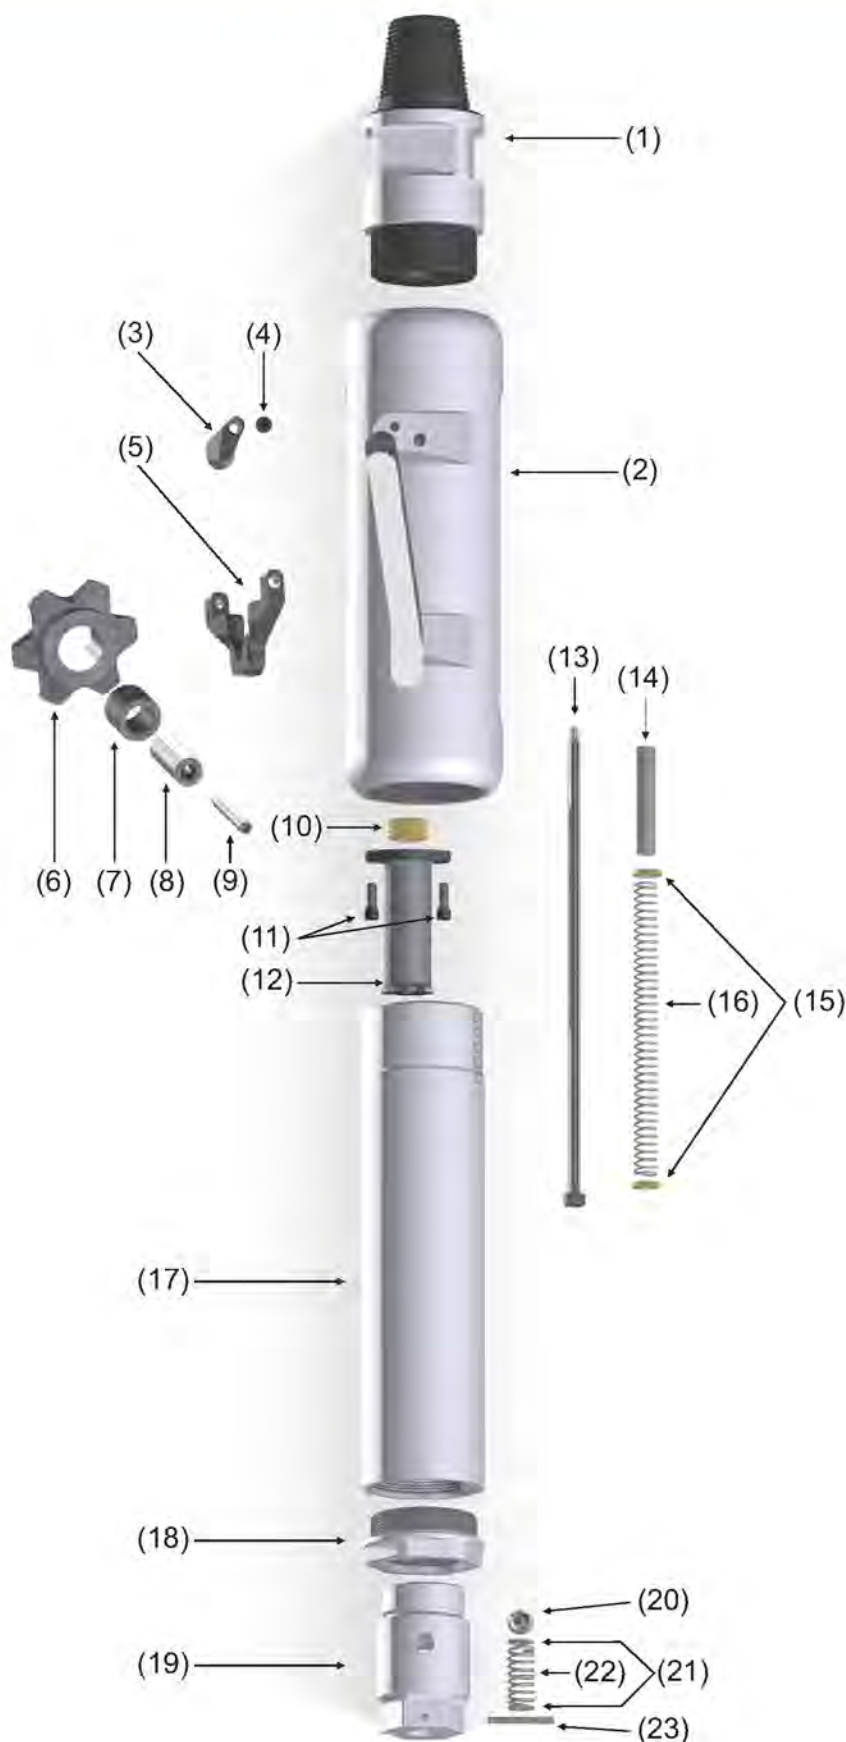

#	Description (qty)	Qty
1	Top Sub Adapter	1
2	Perforator Body	1
3	Travel Stop Right	*
NA	Travel Stop Left	*
4	Perforator Stop Bolts	*
5	Cutter Wheel Yoke	1
6	Steel Cutter Wheel	1
7	Cutter Wheel Bushing	†
8	Axle Pin	1
9	Axle Pin Bolt	1
10	Piston - Brass	1
11	Piston Cylinder Retaining Bolt	2
12	Piston Cylinder	1
13	Yoke Return Rod	1
14	Stop Tube	1
15	Washer	2
16	Return Rod Spring	1
17	Lower Housing	1
18	Pop-Off Valve Bushing	1
19	Pop-Off Valve Body	1
20	Ball Bearing	1
21	Washer	2
22	Pop-Off Valve Spring	1
23	Roll Pin	1

*Only the 6" Perforator has Travel Stops (1 Right, 1 Left, 2 bolts). †The 4" Perforator Cutter Wheel does not have a Bushing.

PERFORATOR PARTS LISTS

6" Perforator Parts

#	Description (qty)	Qty	PN	Spares
1	6" Perforator - Top Sub Adapter	1		
2	6" Perforator - Perforator Body	1		
3	6" Perforator - Travel Stop Right	1		
NA	6" Perforator - Travel Stop Left	1		
4	6" Perforator Stop Bolts	2		
5	6" Perforator - Cutter Wheel Yoke (Includes Axle Pin Bolt)	1		
6	6" perforator Steel Cutter Wheel w/Bushing*	1		1
8	6" Perforator - Axle Pin	1		1
9	6" Perforator - Axle Pin Bolt	1		1
10	4, 6" Perforator - Piston - Brass	1		
11	Piston Cylinder Retaining Bolt	2		
12	6" Perforator - Piston Cylinder	1		
13	4", 6" Perforator - Yoke Return Rod Only	1		
14	6" Perforator - Stop Tube	1		
15	Washer	2		
16	4" & 6" Perforator - Yoke Return Rod Spring Only	1		
17	6" Perforator - Lower Housing	1		
18	6" Perforator Pop-Off Valve Bushing	1		
19	4"/6"/10" Perforator - Pop-Off Valve (Assembly) Aluminum	1		

*Bushing without Wheel also available: PN

6" Perforator Casing Shoes

Perforator in (mm)	Shoe in (mm)
6" (152)	No Shoe
	8" Slide (203)
	10" Slide (254)
	10" Roller (254)
	12" Roller (305)
	14" Roller (356)
	16" Roller (406)
	Custom Shoes

Replacement Cutting Wheels (with Bushing)

Perforator in (mm)	Standard Wheel	Thin Wheel	PVC Wheel
4" (102)*		N/A	
6" (152)			
Large-10" (254)		N/A	

*4" Perforator Cutter Wheel does not use/come with a Bushing

4"/6"/10" Perforator - Pop-Off Valve Rebuild Kit

Includes Bearing, Washers, Spring, and Roll Pin